



VIEVU Smartphone App User Guide

Overview

This guide describes how to use the VIEVU smartphone app with a VIEVU² wearable video camera.

Contact Us

If you need assistance with the VIEVU Smartphone App or the VIEVU² camera, please visit www.viewu.com/support, contact us by phone at 888-285-4548 or email support@viewu.com.



Compatibility

The VIEVU smartphone app is currently only compatible with Android 2.2+ smartphones. An iOS compatible version is coming soon.

 
Contents

Main Screen.....	2
Sidebar.....	4
Settings.....	5
Video on Camera.....	6
Video on Phone.....	7
Trim Video.....	8

Main Screen When the VIEVU app is launched you will be taken to the Main Screen. The Main page will display 3 different states:

Smartphone is Not Connected to Camera's Wi-Fi:

If the VIEVU app is not connected to a Camera's Wi-Fi network the "No Wi-Fi" icon is displayed. Tap on the screen to enter the smartphone's Wi-Fi connection menu to connect to the camera's Wi-Fi network.

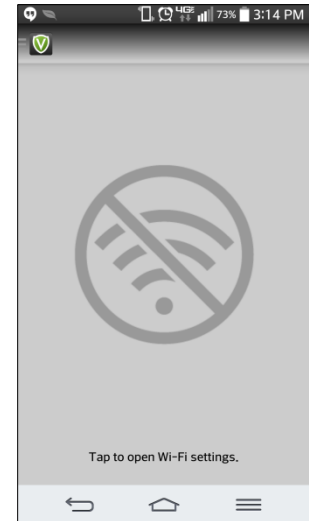

Smartphone is Connecting to the Camera:

The VIEVU app is connecting to the VIEVU² camera.



Connected to Camera:

The VIEVU app is connected to a VIEVU² camera. If the lens is open you will see the video being streamed to the phone from the camera.



The Main Screen has several buttons. Their functions are outlined below:




Sidebar	Opens the sidebar menu to access features and change camera settings
Record Switch Selector	Changes the action of the “Record Button” in the app. When the “phone” icon is selected the “Record Button” will control recording on the phone. When the “camera” icon is selected the “Record Button” will control recording on the camera.
Record Button	The Record Button will start and stop video recording on the device selected with the “Record Switch Selector”

Sidebar

When the Sidebar button is selected a menu will appear on the left side.

 The sidebar displays the status of the camera's battery, storage space and allows you to control settings for the app and camera.

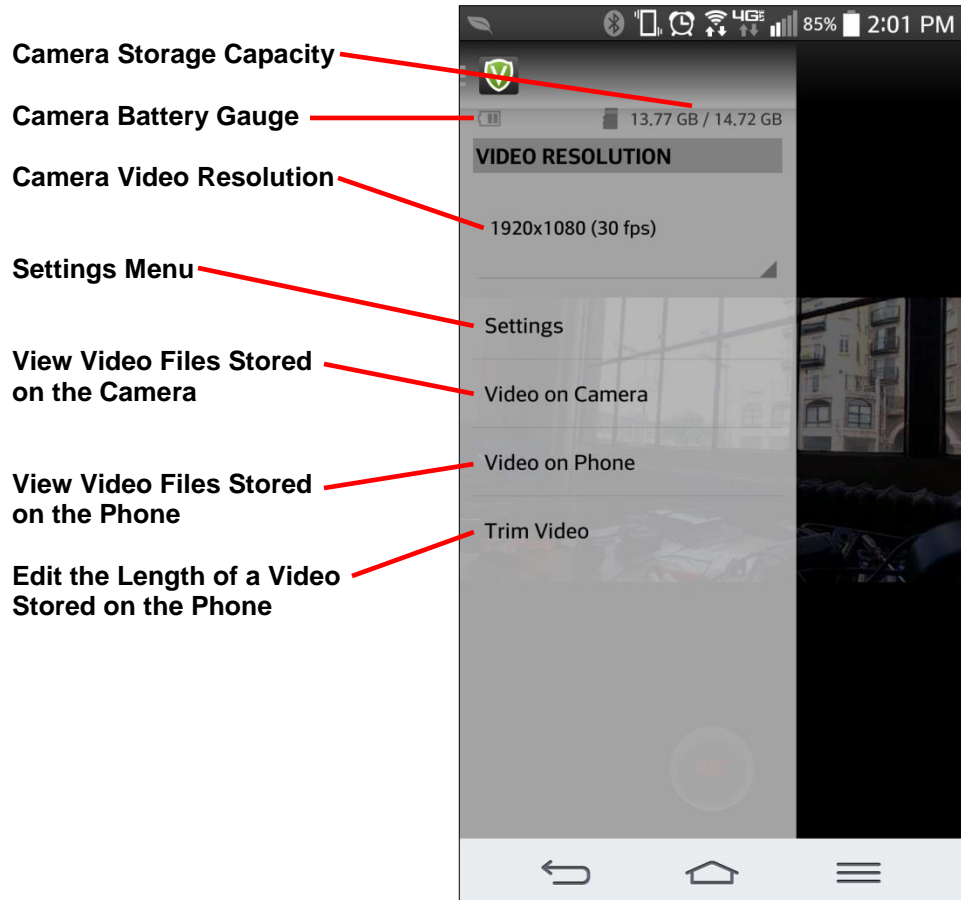

Settings

The Settings menu will allow you to make several changes to the app and the camera.

Notifications

Connected to Wi-Fi: Displays a notification when the app connects to the camera's Wi-Fi.

Vibrate after Connecting: Vibrates the phone when the app connects to the camera's Wi-Fi

Application Settings

Enable Audio While Streaming: Broadcasts the audio from the camera while viewing the video stream on the phone. This does not affect the recordings made on the phone or camera.

Prevent Screen Lock: Prevents the screen from locking while on the Main Screen. This setting will use a lot of the phone's battery power as the LCD screen is never turned off.

Resize Video: Resizes the video stream to best fit the screen on the phone. The resolution of recorded video is not affected.

Save File Behavior: Select the default action for what to do when transferring video from the camera to the phone and the file already exists.

Camera Settings

Timestamp: Toggle the Date/Time stamp on recorded and streamed video Off, Date Only or Date and Time.

 
Auto Time Sync: This feature will automatically synchronize the time between the phone and the camera so that the camera's time is correct.

Date: This setting will allow you to manually change the date on the camera.

Time: This setting will allow you to manually change the time on the camera.

Format Storage: This will erase all of the data from the camera's internal storage.

Firmware Version: This will display the version of the firmware installed on the camera.

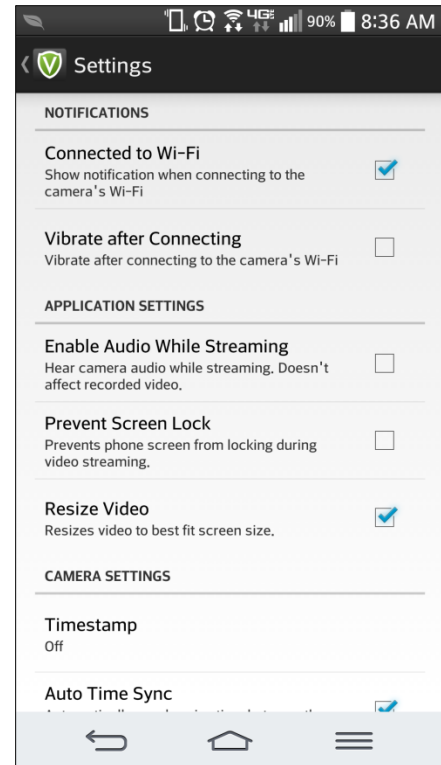

Video on Camera

This function will let you display the video files currently stored on the camera.

Click on a video file to display the download and delete buttons on the top right.

Download Button: This button will transfer the video from the camera to the phone. Once on the phone you can trim the length in the app or share.

Delete Button: This button will delete the video from the camera's internal storage.



Video on Phone

This function will let you display the video files currently stored on the phone. Click on a video file to watch the video.



Trim Video

This function will let you edit the length of a video file currently stored on the phone.

First select the vide you want to trim. Next, move the blue circles to the new start and end point – as you move the blue circles the image above will update.

Note: Trimming a video will not overwrite the original. A copy of the video is made with the new beginning and end points.

When finished click the “Trim Video” button. The trimmed video will be saved on the phone. To identify the trimmed version, the file name is updated to include “trim”.

